

**SYSTEM**



**DESIGN**

**Guidelines for the Design  
of Reverse Osmosis  
Membrane Systems**

**X** Lewabrane®  
**LANXESS**  
Energizing Chemistry

# Index

- 1. System Design ..... 3
  - 1.1 Introduction of RO System ..... 3
    - 1.1.1 Material Balance of RO System ..... 3
    - 1.1.2 Single-Module System ..... 3
    - 1.1.3 Single-Stage System..... 3
    - 1.1.4 Multi-Stage System ..... 3
    - 1.1.5 2 Pass RO System ..... 4
    - 1.1.6 Permeate Blending with Feed Water ..... 4
    - 1.1.7 Permeate Recirculation ..... 4
  - 1.2 Items of Water Analysis ..... 4
  - 1.3 Basic Equations for RO Calculations ..... 5
    - 1.3.1 Water Transport ..... 5
    - 1.3.2 Solute Transport..... 6
    - 1.3.3 Correlation of Operating Conditions..... 6
  - 1.4 RO System Design Guidelines ..... 6
    - 1.4.1 Fouling Tendency with Operating Conditions ..... 6
    - 1.4.2 Recommended Range of Element Operating Conditions (Design Guideline) ..... 7
  - 1.5 Steps to design RO membrane system ..... 9
    - 1.5.1 System Design Information and Feed Water ..... 9
    - 1.5.2 Selection of Element Type and Average Permeate Flux ..... 9
    - 1.5.3 Calculation of Number of Total RO Elements ..... 9
    - 1.5.4 Decision of Recovery Rate ..... 9
    - 1.5.5 Decision of Number of Stages ..... 10
    - 1.5.6 Decision of Number of RO Elements per Pressure Vessel ..... 10
    - 1.5.7 Decision of Element Arrangement ..... 11
    - 1.5.8 Relations between Nominal Performances and Field Results..... 11
    - 1.5.9 Comparing Actual Performance of Lewabrane® Elements to Projection Program. 12

Notice: Please note that the information and recommendations provided in this technical brochure do not claim to be universally valid; in particular, they are not meant to substitute, amend or supplement the information and/or instructions provided by the OEM of the RO membrane system and/or the facility operator. In fact, LANXESS strongly recommends to obtain written confirmation from the OEM of the RO system and/or the facility operator before using the chemicals described in our technical brochure, installation of the RO elements and operation of the RO membrane system, and to verify the advice and information provided herein in each case as to its compatibility with the overall water treatment facility and RO membrane system.

# 1. System Design

## 1.1 Introduction of RO System

### 1.1.1 Material Balance of RO System

The RO system includes a set of RO membrane elements, housed in pressure vessels that are arranged in a design manner. A high-pressure pump is used to feed the pressure vessels. The RO system is operated in crossflow filtration mode, not in dead end mode, because of the osmotic pressure of rejected solute.

The RO system is usually designed for continuous operation and the operating conditions are constant with time. Figure 1.1 illustrates the material balance of a typical RO system. The feed flow is divided to permeate and concentrate flow.

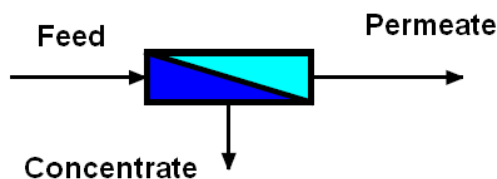


Figure 1.1: Material balance of RO system

### 1.1.2 Single-Module System

An RO membrane system consists of RO elements arranged in pressure vessels. The arrangement of the RO system can be single or double Pass with the specific geometry of the pressure vessel arrangement described in Stages, and with pressure vessels inside a Stage arranged in what is called an Array. Inside the pressure vessel, the elements are connected sequentially in series format with up to eight elements per pressure vessel.

The concentrate of first element becomes the feed to the second, and so on. The product water tubes (center pipe) of all elements are coupled, and connected to the module permeate port. In a single-module RO system, the system recovery rate is approx

50%. This value is applicable to standard single Pass seawater desalination systems.

To achieve the recovery rate of more than 50%, concentrate recirculation is performed. In this system configuration part of concentrate is recycled and added to the suction side of the high-pressure pump, thus increasing the feed flow rate (shown in Figure 1.2). A high fraction of the concentrate being recycled helps reduce single element recovery, and thus, the risk of fouling or scaling. On the other hand, it has design issues that need consideration: larger high-pressure pump, higher energy consumption and permeate quality decrease.

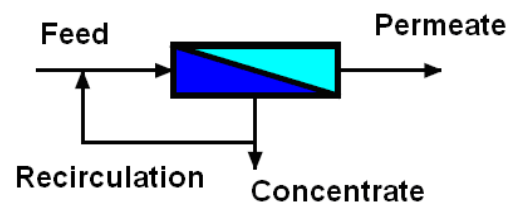


Figure 1.2: Single module system with concentrate recirculation

### 1.1.3 Single-Stage System

In a single-stage system, two or more vessels are arranged in parallel. Feed, concentrate and permeate lines are connected to manifolds. The system is in the same case as a single-module system. Single-stage system is typically used where the recovery rate is less than 50%, e.g., in seawater desalination.

### 1.1.4 Multi-Stage System

Systems with more than one stage are used for higher system recovery rates without exceeding the single element recovery limit. Usually two stages will be applied for recovery rate up to 75-80%. To compensate for the permeate which is removed and to maintain a uniform flow rate to each stage, the number of pressure vessels per stage decreases in flow direction. In a typical two-stage system

(shown in Figure 1.3), the ratio of vessel number is 2:1 (upstream: downstream).

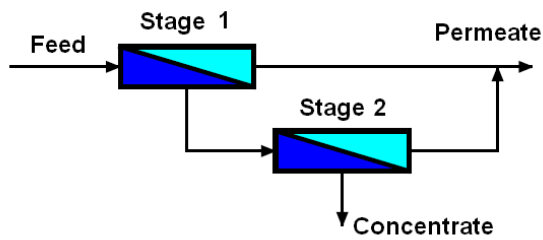


Figure 1.3: Example of 2nd stage system

The relation between recovery rate and the stage number is as follows:

- 1 stage : < 50%;
- 2 stage : < 75-80%;
- 3 stage : < 85-90%

### 1.1.5 2 Pass RO System

A 2 pass RO system is used if a very high permeate quality is required. In this system configuration, the permeate of the 1st pass RO is the feed of 2nd pass RO. Figure 1.4 shows a schematic flow diagram of the 2 pass RO system. The concentrate of the 2nd pass RO is recycled back to the feed of 1st RO because its quality is usually better than the system feed water. And because the feed of the 2nd RO is high quality, the recovery of the 2nd pass RO can be as high as maximum (90-95%).

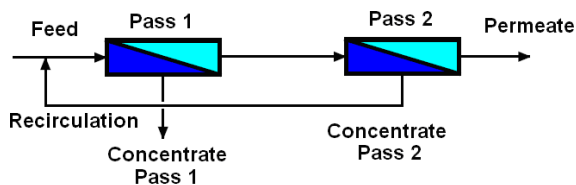


Figure 1.4: 2 pass RO system

### 1.1.6 Permeate Blending with Feed Water

Permeate blending is adopted when a certain salinity of permeate is requested e.g. drinking water. In this case, some additional system feed water (blending flow) is taken and added to the permeate (shown in Figure 1.5).

By adopting this system, number of RO element can be decreased.

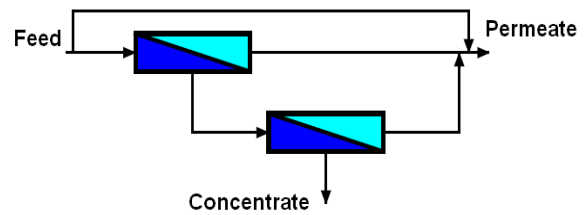


Figure 1.5: Permeate blending system of a two stage system

### 1.1.7 Permeate Recirculation

In the case that the feed temperature greatly differs (e.g. summer and winter), the feed pressure should be changed to keep the permeate constant. This change in feed pressure may cause permeate quality instability. To prevent the instability, a part of the permeate is recycled and added to the suction side of the high-pressure pump (shown in Figure 1.6), when the permeate flow is higher than the estimated value. By keeping the feed pressure constant, the permeate quality is kept constant.

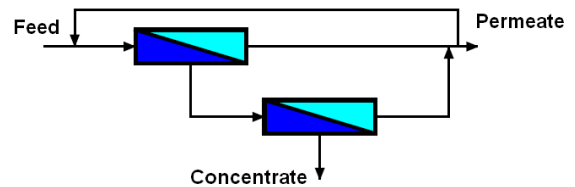


Figure 1.6: Permeate recirculation of a two stage system

## 1.2 Items of Water Analysis

The major water types treated by RO membrane are roughly divided into seawater, brackish water, wastewater, municipal water and RO permeate. In addition, these water types are finely classified by the type of pretreatment (natural or artificial). With respect to TDS concentration, 35,000 mg/l is considered to be the standard.

However, the actual TDS concentration may vary from 7,000 mg/l up to 45,000 mg/l. The composition may be proportionally estimated from the standard seawater composition (shown in Table 1.1).

Whereas the composition of brackish water and wastewater may be extremely wide in variation, and accordingly, feed water analysis is very important for a good process design. Because in brackish water desalination, calcium carbonate and silica scale are frequent occurrences, at least concentrate of TDS, calcium ion, bicarbonate ion (alkalinity), silica and pH value are needed to design RO process. If the water analysis is not balanced, the addition of either sodium ion or chloride ion to achieve electroneutrality is recommended.

Ion	Concentration (mg/l)
Calcium	420
Magnesium	1,320
Sodium	10,880
Potassium	400
Barium	0.03
Strontium	10
Iron	< 0.02
Manganese	< 0.01
Silica	2.0
Chloride	19,800
Sulfate	2,660
Fluoride	1.3
Bromide	65
Nitrate	< 0.7
Bicarbonate	150
Boron	4-5
TDS (Total Dissolved Solid)	35,000
pH	8.1 – 8.2 (-)

Table 1.1: Standard seawater composition

## 1.3 Basic Equations for RO Calculations

### 1.3.1 Water Transport

Water transport through the membrane is expressed as a permeate flux. The flux is generally defined as the volumetric flow rate of water through a given membrane area. In the case of RO, the unit of flux is expressed as liters of water per square meter of membrane area per hour (lmh) or gallons per square foot per day (gfd). The permeate flux is proportional to the net driving pressure (NDP).

$$J_v = A \times NDP \quad (1.1)$$

$$NDP = \Delta P - \Delta \pi - 0.5 \times dp \quad (1.2)$$

In which:  $\Delta P = P_f - P_p$ , pressure differential

$\Delta \pi = \pi(C_{f,ave}) - \pi(C_p)$ , average osmotic pressure differential

$J_v$ , permeate flux,  $A$ , water permeability (specific flux),  $NDP$ , net driving pressure

$P_f$ , feed pressure,  $P_p$ , permeate pressure,  $P_c$ , concentrate pressure,  $dp$ , pressure drop

$\pi(C_{ave})$ , average feed osmotic pressure,  $\pi(C_p)$ , permeate osmotic pressure

$C_f$ , feed concentration,  $C_p$ , permeate concentration,  $C_c$ , concentrate concentration

$C_{f,ave} = (C_f + C_c) / 2$ , average feed concentration

NDP is calculated by pressure difference, osmotic pressure difference and pressure drop. The average feed concentration (feed and concentrate) is used to calculate osmotic pressure.

The product flow rate can be obtained by multiplying the permeate flux by total membrane area.

$$Q_p = M_A \times J_V \quad (1.3)$$

In which:  $Q_p$ , product flow rate,  $M_A$ , total membrane area

The pressure drop is calculated by the average flow rate (feed and concentrate) as follows:

$$dp = a \times \{(Q_f + Q_c) / 2\}^b \quad (1.4)$$

In which  $a$  and  $b$  are coefficients, specific for element and feed spacer configuration. The values for these coefficients are obtained experimentally.

### 1.3.2 Solute Transport

Solute transport through an RO membrane is expressed as a solute flux. This solute flux is proportional to the concentration difference across the membrane. The average feed concentration (feed and concentrate) is used in the feed side to calculate solute transport. And the rate of solute transport is defined by rejection or salt passage as follows:

$$J_S = B \times (C_{fave} - C_p) \quad (1.5)$$

$$R = 1 - (C_p / C_{fave}) \quad (1.6)$$

$$SP = 1 - R = C_p / C_{fave} \quad (1.7)$$

In which:

$J_S$ , solute flux,  $B$ , solute permeability,  $R$ , rejection,  $SP$ , salt passage

Rejection and salt passage are usually expressed as percent.

### 1.3.3 Correlation of Operating Conditions

RO membrane system performance (flux and rejection or salt passage) is influenced by operating conditions such as operating pressure, temperature, feed concentration etc. So the parameters of RO performance (specific flux and salt passage) are revised by

the operating conditions influencing the RO performances as follows:

$$A_s = A_n \times TCF_1 \times SCF_1 \times FF \quad (1.8)$$

$$SP_s = SP_n \times \{(J_V)_n / (J_V)_s\} \times TCF_2 \times SCF_2 \quad (1.9)$$

In which:

$A_s$ , specific flux at operating conditions,  $A_n$ , specific flux at nominal conditions

$SP_s$ , salt passage at operating conditions,  $SP_n$ , salt passage at nominal conditions

$(J_V)_n$ , permeate flux at operating conditions,  $(J_V)_s$ , permeate flux at nominal conditions

$TCF$ , correlation factor of temperature (1; on specific flux, 2; on salt passage)

$SCF$ , correlation factor of feed concentration (1; on specific flux, 2; on salt passage)

$FF$ , fouling factor

In computer programming, estimated performance based on the nominal value is automatically calculated by using above equations.

## 1.4 RO System Design Guidelines

### 1.4.1 Fouling Tendency with Operating Conditions

The factor which has the greatest influence on the RO system design guideline is the fouling tendency of the feed water. Membrane fouling is caused by particles and colloidal materials which are present in the feed water and become concentrated at the membrane surface. The Silt Density Index (SDI) of pretreated feed water is an index of the fouling potential of particle or colloidal materials in the RO system. The concentration of the fouling materials at the membrane surface increases with increasing permeate flux, increasing

element recovery and decreasing concentrate flow rate. Therefore the average permeate flux of the RO system (total product flow rate divided by total membrane area) should be low if a strong fouling environment is anticipated.

#### **1.4.2 Recommended Range of Element Operating Conditions (Design Guideline)**

The RO membrane system should be designed such that each element of the system operates within the recommended operating conditions to minimize the fouling possibility, and to exclude mechanical damage. The limiting conditions are the maximum recovery (system and element), the maximum average permeate flux, the minimum concentrate flow rate, the maximum feed flow rate, the maximum lead element permeate flux, and so on. The higher the fouling tendency of the feed water, the limits of the parameters become stricter.

Table 1.2 shows the range of these parameters according to the type of the feed water and the type of pretreatment. The membrane pretreatment improves the feed water quality in view of the fouling. In the table the parameter of membrane performance changes with time is added (flux decline rate and salt passage increase).

The range of parameters shown in the table is recommended value to minimize the fouling possibility, but it does not mean that the system design out of the parameter range is impossible. It means that the possibility of the fouling becomes higher.

Feed Water Type	Average Permeate Flux	Lead Element Permeate Flux	Concentrate Flow Rate	Feed Flow Rate	Pressure Drop per Vessel	Element Recovery Rate	Flux Decline Rate	Salt Passage Increase
Municipal Supply	22 (19-25)	< 32	> 3.6	< 13	< 2.0	< 15	> 10	> 10
Brackish Wells	29 (25-33)	< 43	> 3.0	< 16	< 3.0	< 20	> 7	> 10
Surface Water Media Filtration	21 (18-24)	< 31	> 3.6	< 13	< 2.0	< 15	> 10	> 10
Surface Water MF/UF Filtration	27 (23-29)	< 39	> 3.0	< 15	< 3.0	< 17	> 7	> 10
Secondary Waste Media Filtration	11 (9-13)	< 19	> 3.6	< 12	< 2.0	< 12	> 15	> 15
Secondary Waste MF/UF Filtration	17 (13-20)	< 25	> 3.6	< 13	< 2.0	< 13	> 15	> 10
Seawater Intake Media Filtration	14 (12-16)	< 28	> 3.6	< 14	< 2.0	< 10	> 10	> 10
Seawater Intake MF/UF Filtration	17 (15-19)	< 32	> 3.6	< 14	< 3.0	< 12	> 10	> 10
Seawater Beach Wells	17 (15-19)	< 35	> 3.6	< 15	< 3.0	< 12	> 7	> 10
RO Permeate	35 (30-39)	< 48	> 2.4	< 17	< 3.0	< 30	> 3	> 5

Table 1.2: RO system design guideline



## 1.5 Steps to design RO membrane system

### 1.5.1 System Design Information and Feed Water

The RO membrane system highly depends on the available feed water. Therefore, the system design information (customer/OEM, required product flow rate, expected recovery rate, annual water temperature, water source, application, pretreatment, required product water quality, operating pressure limit, etc.) and the feed water analysis should be thoroughly studied and considered in selection of the RO system design. If the required permeate water quality is so high that the quality cannot be achieved by 1pass RO system, and then a 2 pass RO system should be considered. As an alternative to the 2 pass RO, an ion exchange resin system may also be a viable design option.

### 1.5.2 Selection of Element Type and Average Permeate Flux

According to the feed water source, pretreatment and feed water salinity, the type of RO membrane element is selected. The relationship between the feed salinity and general selection of RO element is shown in Table 1.3. In the case that the RO feed water is a wastewater, the low fouling RO element may be also be considered.

Low conc. Brackish water (up to 500mg/l)	: BWRO (Low energy)
Brackish water (up to 5,000 mg/l)	: BWRO (Standard)
Brackish water (more than 5,000 mg/l), Seawater	: SWRO

Table 1.3: Selection of RO element according to the feed salinity

Once the water source, pretreatment and RO element type are fixed by the designer, the recommended value of the average permeate flux (also called “design flux”) is

given. The LANXESS recommended design flux values for Lewabrane® RO membrane elements are listed in Table 1.2. In some cases, the design flux value is determined by pilot experiment data or customer’s experience.

### 1.5.3 Calculation of Number of Total RO Elements

The relationship between the number of total elements, the product flow rate and the average permeate flux is expressed as follow equation:

$$N_E = Q_p / J_{V,ave} \times (M_A)_E \quad (3.10)$$

In which:

$N_E$  = total element numbers

$Q_p$  = product flow rate

$J_{V,ave}$  = average permeate flux

$(M_A)_E$  = membrane area of element (as shown in data sheet)

The calculated number of RO elements may be a slightly changed based on the decision of element arrangement, that is, the number of pressure vessels and RO elements per pressure vessel.

### 1.5.4 Decision of Recovery Rate

In an RO membrane system, a recovery rate as high as possible is desirable, but a high recovery rate can also cause some problems as follows:

- Possibility of scale formation increase because of the increase of concentration factor
- Osmotic pressure increase because of the increase of concentration factor
- Concentrate flow rate decrease
- Permeate water quality deterioration because of average feed concentration increase

Recovery Rate	Concentration Factor
50%	2
75%	4
80%	5
90%	10

Table 1.4: Relationship between Recovery Rate and Concentration Factor

The relationship between recovery rate and concentration factor is shown in Table 1.4.

Usually in brackish water desalination, the recovery rate is decided by scale formation, and in seawater desalination, by feed pressure limit. Some customers often require the highest possible recovery rate, but in that case, the value of the recovery rate should be decided by considering the potential for the above problems.

### 1.5.5 Decision of Number of Stages

The number of RO stages defines how many pressure vessels are in series in the RO membrane system. Every stage consists of a certain number of pressure vessels in parallel. The number of stages is a function of the system recovery rate, the number of elements per vessel, and the feed water quality shown in Table 1.5.

1 stage system: < 50%
<ul style="list-style-type: none"> <li>Usual recovery SWRO (&lt; 50%)</li> </ul>
2 stage system: < 75-80%
<ul style="list-style-type: none"> <li>Usual recovery BWRO (&lt; 80%)</li> <li>High recovery SWRO (&lt; 60%)</li> <li>High recovery 2nd pass (&lt; 90%)</li> </ul>
3 stage system: < 85-90%
<ul style="list-style-type: none"> <li>High recovery BWRO (&lt; 90%)</li> <li>High recovery 2nd pass (&lt; 95%) (special case)</li> </ul>
SWRO: seawater desalination, BWRO: Brackish water desalination

Table 1.5: Relationship between recovery rate and number of RO stage

### 1.5.6 Decision of Number of RO Elements per Pressure Vessel

RO membrane elements can be coupled together in series in the pressure vessel, typically 1-8 elements per one pressure vessel. In deciding the number of RO elements per pressure vessel, plant size is usually considered first. In a large-scale plant (> 40 m<sup>3</sup>/h), 6-8 elements per pressure vessel are usually adopted, and in a smaller plant, 3-5 elements per pressure vessel. In all cases, the space required to install or remove the RO elements should be considered in the plant design.

By increasing the number of RO elements per pressure vessel, almost all RO design parameters will change. RO design parameters are average permeate flux, lead element permeate flux, concentrate flow rate, feed flow rate, individual element recovery rate, and pressure drop per vessel, etc.. Some factors improve (become desirable) and some factors become worse (undesirable). Table 1.6 shows RO system design parameters and the correlation between an increase in number of RO element per pressure vessel, and change in RO system design parameters. It is recommended that these parameters are in accordance with the design guideline (Table 1.6).

RO System Design Parameters	Effect of increasing number of Elements/Vessel	Judgement of the effect
Average Permeate Flux	Same	No change
Lead Element Flux	Larger	Undesirable
Concentrate Flow Rate per Vessel	Larger	Desirable
Feed Flow Rate per Vessel	Larger	Undesirable
Pressure Drop per Vessel	Larger	Undesirable
Pressure Drop per Element	Larger	Undesirable
Recovery Rate of Element	Smaller	Desirable
Recovery Rate of System	Same	No change
Number of Vessel	Smaller	Desirable

Table 1.6: Effects of changing the RO design

### 1.5.7 Decision of Element Arrangement

The RO element arrangement (array) means element numbers per vessel, vessel numbers per stage and stage numbers per pass. For the decision of element arrangement, the system design parameters should be consistent with the design flux guideline. However, not all the parameters are suitable to the guideline. In the case that not every parameter is in accordance with the design guideline, it is necessary to make a priority in the parameters. Usually average permeate flux, concentrate flow rate and pressure drop per vessel should be of higher priority.

To decide the array, several calculations for case study should be done by computer program and these results should be compared. Some case studies should be done with the consideration of different operating conditions (feed concentration, temperature, etc.) or performance changes with time. For each typical case, a comparison should be done in consideration of value of design parameter, the numbers of RO elements or pressure vessel, and satisfying the customers demand (product water quality, limit of feed pressure etc.).

### 1.5.8 Relations between Nominal Performances and Field Results

The relationship between nominal performances (data sheet values) and actual field results are as follows:

- a) With same membrane area and at the same nominal test conditions, a higher nominal flow rate element will require lower feed pressure.
- b) At different test conditions and /or different membrane area, feed pressure will be defined by water permeability (specific flux).
- c) With the same membrane area, the same nominal test conditions, and the same permeate flow rate, a higher salt rejection element will produce a permeate of lower salinity.
- d) At different membrane area and/ or nominal test conditions, a lower relative salt passage element (multiplier of nominal permeate flux by nominal salt passage) will produce a permeate of lower salinity.

e) The nominal permeate flux (catalogue value) is usually quite large (large enough that it will not cause membrane fouling),

Therefore, the average permeate flux in actual field becomes smaller than the nominal permeate flux.

### **1.5.9 Comparing Actual Performance of Lewabrane® Elements to Projection Program**

The LewaPlus™ projection program is a tool used to estimate stabilized performance for a specific RO membrane system under design or actual conditions. The projected RO membrane system performance is based on a nominal performance specification for the Lewabrane® elements used in the given system. A fouling factor of 1 in the projection program is used to calculate the performance of new elements based on the nominal flow rate (data sheet value). A fouling factor of  $< 1$  should be used when making a design for long-term operation.

In the actual RO membrane system, the RO elements may have a flow rate variation of  $\pm 15\%$  of the nominal value, or whatever variation is specified for a given element type. Also, the salt rejection of an individual element may be higher or lower than the nominal salt rejection (but more than the minimum value). Therefore, the measured stabilized performance is unlikely to be exactly the same as the computer projected performance, but as a rule of thumb, the computer projection for RO systems with more than 36 new elements should come close to the computer design projection.

The actual fouling factor of a stabilized new RO system with at least 36 elements should range between 0.95 and 1.05. The actual measured TDS value of permeate should be no higher than about 1.5 times the calculated TDS value. For RO membrane systems with only one, or a few elements, the deviation of the measured actual performance from the projected performance may become as large as the specified performance variation.

## DISCLAIMER

**Health and Safety Information:** Appropriate literature has been assembled which provides information concerning the health and safety precautions that must be observed when handling the LANXESS products mentioned in this publication. For materials mentioned which are not LANXESS products, appropriate industrial hygiene and other safety precautions recommended by their manufacturers should be followed. Before working with any of these products, you must read and become familiar with the available information on their hazards, proper use and handling. This cannot be overemphasized. Information is available in several forms, e.g., material safety data sheets, product information and product labels. Consult your LANXESS representative in Germany or contact the Regulatory Affairs and Product Safety Department of LANXESS Deutschland GmbH or - for business in the USA - the LANXESS Product Safety and Regulatory Affairs Department in Pittsburgh, PA, USA.

**Regulatory Compliance Information:** Some of the end uses of the products described in this publication must comply with applicable regulations, such as the FDA, BfR, NSF, USDA, and CPSC. If you have any questions on the regulatory status of these products, contact - for business in the USA - your LANXESS Corporation representative, the LANXESS Regulatory Affairs Manager in Pittsburgh, PA, USA or for business outside US the Regulatory Affairs and Product Safety Department of LANXESS Deutschland GmbH in Germany.

The manner in which you use and the purpose to which you put and utilize our products, technical assistance and information (whether verbal, written or by way of production evaluations), including any suggested formulations and recommendations are beyond our control.

Therefore, it is imperative that you test our products, technical assistance and information to determine to your own satisfaction whether they are suitable for your intended uses and applications. This application-specific analysis must at least include testing to determine suitability from a technical as well as health, safety, and environmental standpoint. Such testing has not necessarily been done by us. Unless we otherwise agree in writing, all products are sold strictly pursuant to the terms of our standard conditions of sale. All information and technical assistance is given without warranty or guarantee and is subject to change without notice. It is expressly understood and agreed that you assume and hereby expressly release us from all liability, in tort, contract or otherwise, incurred in connection with the use of our products, technical assistance, and information.

Any statement or recommendation not contained herein is unauthorized and shall not bind us. Nothing herein shall be construed as a recommendation to use any product in conflict with patents covering any material or its use. No license is implied or in fact granted under the claims of any patent.

© 2012 – All Rights Reserved  
LANXESS Deutschland GmbH

## CONTACT

LANXESS Deutschland GmbH  
Business Unit Ion Exchange Resins  
Chempark Leverkusen  
51369 Leverkusen, Germany  
Email: [lewabrane@lanxess.com](mailto:lewabrane@lanxess.com)

**Edition:** October 2012